

VOLTAGE CONVERSION INSTRUCTIONS FOR W2V10 / 20 / 40 SERIES

STEP 1: Change Wiring- Observe the numbering on the wires and change accordingly.


The wiring for the 230V setup will be as follows-

- 1 BLK
- 2
- 3
- 4 BLK



To change to 110V, the setup is as follows-

- 1 3 BLK
- 2 4 BLK

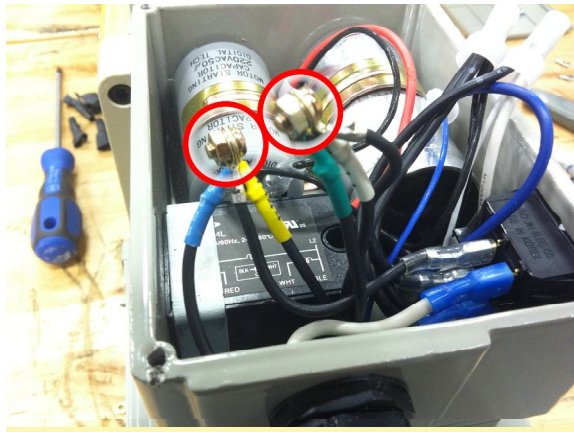

STEP 2: Cover the connections- Use heat shrink or electrical tape to protect the connections from arcing/shorting.



STEP 3: Install new power cord- Connect the green wire to ground, connect the brown wire on the bottom of the switch, and connect the blue wire on the top of the switch.



STEP 4: Replace voltage sticker on cover.

